


Swissphone DE920 Instruction Manual

Keys

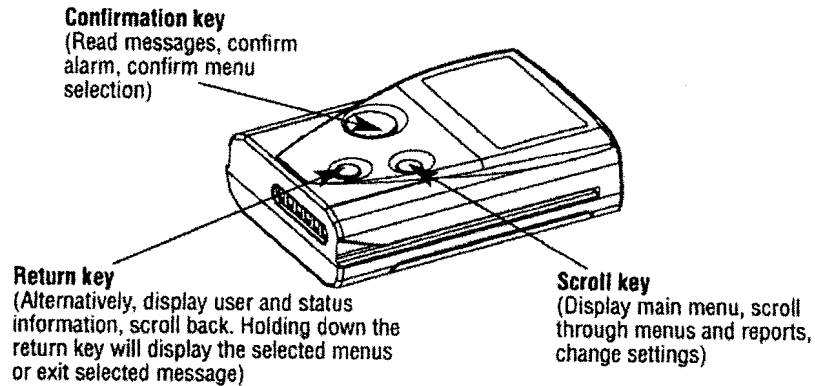

TURNING YOUR PAGER ON


Hold down any key for a longer period to switch the receiver on.

TURNING YOUR PAGER OFF

Starting position: stand-by mode

Press the scroll key and the menu "MESSAGES" is displayed

- With the scroll key, select the menu "SWITCH OFF"
- Press the confirmation key. The question, "Are you sure?" appears
- Press the confirmation key once again to switch off the receiver

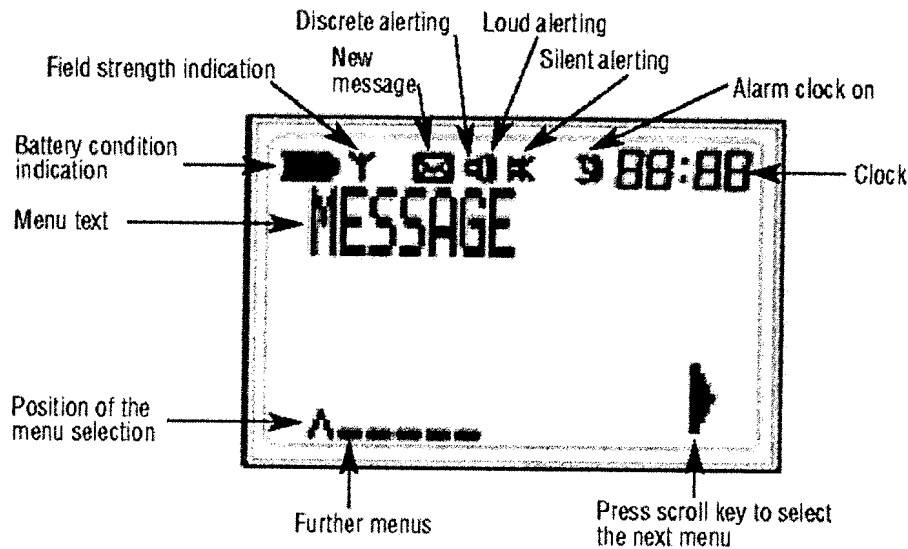

RECEIVING AND READING YOUR MESSAGES

Individual messages received are alerted, displayed and stored in the memory. Single new (unread) messages are also identified by means of the envelope icon. The individual saved messages are displayed from left to right in the menus "read", "delete" and "protect" by means of icons, based on the time they were received. When a new message is saved all the messages are moved to the right by one position with the oldest message being moved into the automatic storage tray if the memory is already full. Protected messages are retained in the memory.

Reading new messages

A newly received message appears on the display immediately.

– Alerting is stopped by pressing any key.

– By pressing the scroll key, you can read the messages. Only once you have scrolled right through to the end of the message is the message considered as being read. At the end of the release time the receiver automatically reverts back to stand-by mode.

Reading messages

Starting position: stand-by mode

– Press the confirmation key to display messages. The cursor is then on the most recent message.


– Press the scroll key to select the next message

– Press the confirmation key to read the selected message. The first 3 lines of the message are displayed


– Press the scroll key to read the whole message

Reading messages with the confirmation key

You also have the possibility of directly scrolling through and reading all messages directly with the confirmation key.

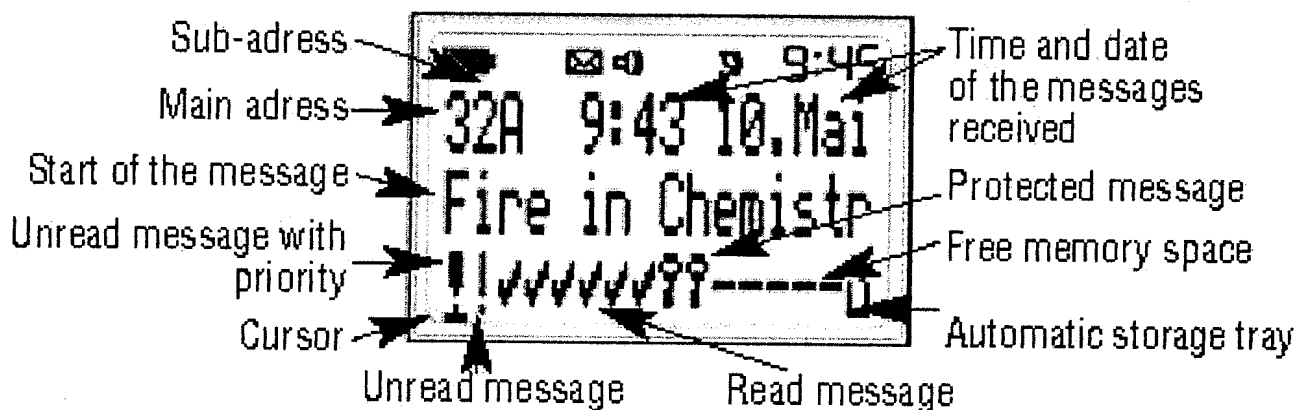

Keys

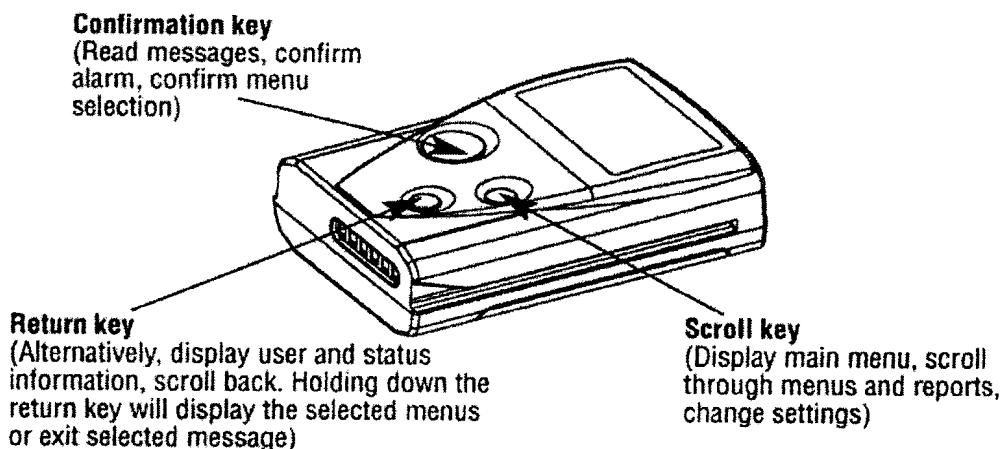

Illuminated display

To switch on display illumination manually, press the confirmation key for 1 second. To switch the display off again press the confirmation key again for 1 second. The display will be switched off automatically at the latest when the receiver reverts back to stand-by mode.

Protecting messages

Protected messages are not overwritten by more recent messages and therefore remain until they are deleted.

Starting position: stand-by mode

- Press the scroll key and the “MESSAGES” menu is displayed
- Press the confirmation key
- With the scroll key, select the menu “Protect”
- Press the confirmation key
- With the scroll key, select the message required
- Press the confirmation key to protect the message

Deleting individual messages

Starting position: stand-by mode

- Press the scroll key and the “MESSAGES” menu is displayed
- Press the confirmation key
- With the scroll key, select the “Delete” menu and press the confirmation key
- With the scroll key, select the message, which is to be deleted
- Press the confirmation key to delete the message
- Press the confirmation key again to delete all messages or the return key to abort the process

Deleting all messages

Starting point: stand-by mode

- Press the scroll key and the “MESSAGES” menu is displayed
- Press the confirmation key
- With the scroll key, select the “Delete all” menu to delete all messages
- Press the confirmation key. The question appears, “Are you sure?”
- Press the confirmation key again to delete all messages or the return key to abort the process

Setting the clock

Starting position: “SETTINGS” menu

- Press the confirmation key to select the “Set time” menu
- With the scroll key set the hours and minutes and confirm respectively

Setting the date

Starting position: “SETTINGS” menu

- With the scroll key, select the “Set date” menu
- Press the confirmation key
- With the scroll key select the year, month and day of the week and confirm respectively

Alarm clock

Starting position: stand-by mode

- Press the scroll key and the “MESSAGES” menu is displayed
- With the scroll key, select the “ALARM CLOCK” menu
- Press the confirmation key

Switching the alarm clock on and off

Starting position: “ALARM CLOCK” menu

- Press the confirmation key to select the “On/Off” menu
- Select “On” or “Off” with the scroll key
- Accept your selection with the confirmation key

Quitting alarm clock

The alarm tone is switched off as soon as the any key is pressed. The alarm clock icon will blink as long as the repeat alarm is active. After the alarm repeat period the alarm tone starts again. If the confirmation key is pressed for at least 2s the alarm tone is switched off for the whole day.

The alarm, however, remains switched on and will sound, once again, the next day.

Setting the alarm clock

Starting position: "ALARM CLOCK" menu

- Press the confirmation key to select the "Set time" menu
- Push the confirmation key
- With the scroll key set the hours and minutes and confirm respectively

Alarm repeat

Starting position: "ALARM CLOCK" menu

- With the scroll key, select the "Snoozer" menu
- Press the confirmation key
- With the scroll key, select the number of repeats and the time interval in minutes and confirm respectively

Switching-on with alarm clock

If the alarm clock is switched on and the receiver is switched off, the Swisspone DE920/DE920 Ex/DE940 will be switched on at the alarm time set and the alarm clock will sound.











Alerting


Alarm settings differentiate essentially between messages with and without priority. This depends on how the particular receiver address (RIC) is configured.

In the alarm options menu the Swissphone DE920/DE920 Ex/DE940 can be configured to "loud" (loud alerting with vibrator), "discrete" (mini beep with vibrator), or "silent" (vibrator only) and "off" (visual display only).

Starting position: stand-by mode

- Press the scroll key and the "MESSAGES" menu is displayed
- With the scroll key, select the "ALERT OPTIONS" menu
- Press the confirmation key
- With the help of the scroll key, select the required alarm option
- Press the confirmation key to accept the alarm option selected

	Symbol	Alerting	Alerting of messages with priority
Loud		 Standard signalling	 Doubled standard signalling
Discrete		 10 seconds vibration then mini beep	 10 seconds vibration then doubled standard signalling
Silent		 10 seconds vibration	 10 seconds vibration then doubled standard signalling
Off			 10 seconds vibration then doubled standard signalling

Acoustical alerting 

Vibration 

OTHER FEATURES:

Battery Gauge: The battery gauge indicator is located on the status screen and keeps you informed of the battery energy level.

BATTERY INFORMATION

The Swissphone DE920/DE940 receiver automatically identifies whether an alkaline battery or a re-chargeable battery is installed.

Battery level indication



80%– 100%



33%– 80%



13%– 33%



0%– 13%

When it is switched on, the battery icon is always visible on the display and indicates the amount of energy still available. Period of operation can be up to 1000 hours, depending on the power supply, network configuration and the type of operation programmed.

Should the energy source be virtually used up, the empty battery icon starts to blink and a regular reminder tone sounds. There is still an operating time of at least 24 hours available. By pressing the confirmation key, the battery alarm is switched off, the empty battery icon, however, continues to blink.

CARE OF YOUR PAGER

To maintain the fine optical quality of the display in the pager, do not subject it to extreme temperatures and moisture.